

TT-15 ADJUSTABLE RECOIL PAD SYSTEM

How to adjust your TT-15 Adjustable Recoil Pad:

To remove the recoil pad from the stock, insert the Allen Wrench provided with the firearm into the left side of the lower plate of the recoil pad. Loosen the screws roughly two turns. **Do not remove screws completely.** This will allow you to slide the recoil pad all of the way out of the stock for greater ease of adjustments.

To lower the recoil pad use the same Allen Wrench and loosen the middle screw. Once this is done you can lower and raise the recoil pad to the height that is desired. After adjustment tighten the screw back. **Do not overtighten.**

To adjust the Drop at Heel/Drop at Toe on the recoil pad use the same Allen Wrench to loosen the top and bottom screws on the bottom of the recoil plate. Once these are loosened you will be able to adjust the pitch of the recoil pad to the desired position. By loosening the bottom screw and tightening the top screw you will be able to adjust for the drop at toe. By tightening the bottom screw and loosening the top screw you will be able to adjust for the drop at heel.

To change the cant of the recoil pad use the same Allen Wrench to loosen the screws on the bottom of each post. By loosening these screws you can slide the posts left or right. By sliding the top post to the left and the bottom post to the right the cant of the top of the recoil pad will be to the right and the bottom of the recoil pad will be to the left, offsetting each other. By sliding the top post to the right and the bottom post to the left the cant of the top of the recoil pad will be to the left and the bottom of the recoil pad will be to the right, offsetting each other. By sliding both posts to the left will shift the recoil pad to the right. By sliding both posts to the right will shift the recoil pad to the left. Once the desired position is found tighten both screws on the bottom of each post. **Do not overtighten.**

To adjust the Length of Pull use the spacers that were included with the firearm. Each spacer has been engraved for easy indication as to how wide they are. Included are two quarter-inch spacers, two half-inch spacers, and two 1-inch spacers. The spacers can be installed by sliding them over the recoil pad posts. This must be done after the recoil pad has been removed from the stock.

To install the recoil pad to the stock, slide each post into the slots on the top of the lower plate. Once install use the same Allen Wrench to tighten both screws on the left side of the lower plate. **Do not overtighten.**



